


1/16 - 1/8 DIN INDICATOR CONCISE PRODUCT MANUAL (59344-7)

CAUTION: Installation should be only performed by technically competent personnel. Local Regulations regarding electrical installation & safety must be observed. See Supplementary Installation & Safety Information in section 1.


1. INSTALLATION

Some installation details vary between the three model sizes covered by this manual (refer to section 9). These differences have been clearly shown.

Installing Option Modules: 1/16 Din Size Instruments

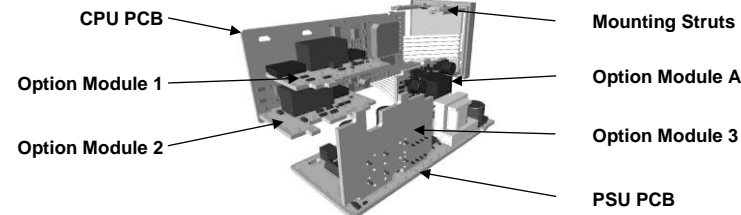

Installing Option Modules: 1/8 Din Size Instruments

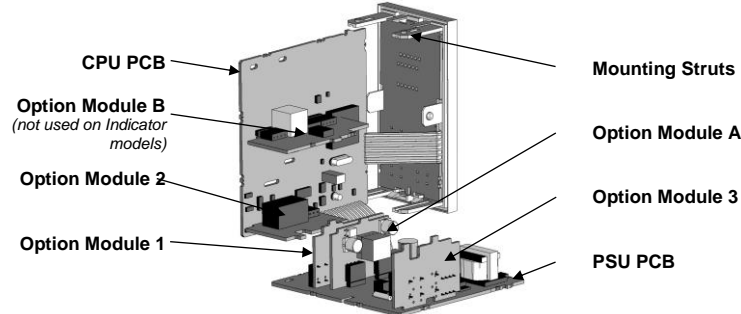


To access modules 1 or A, first detach the PSU and CPU boards from the front by lifting first the upper, and then lower mounting struts. Gently separate the boards.


- Plug the required option modules into the correct connectors, as shown below.
- Locate the module tongues in the corresponding slot on the opposite board.
- Hold the main boards together while relocating back on the mounting struts.
- Replace the instrument by aligning the CPU and PSU boards with their guides in the housing, then slowly push the instrument back into position.

Note: Option modules are automatically detected at power up.

Option Module Connectors: 1/16 Din Size Instruments

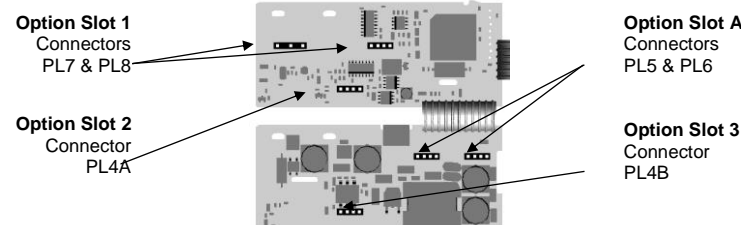

Option Module Connectors: 1/8 Din Size Instruments

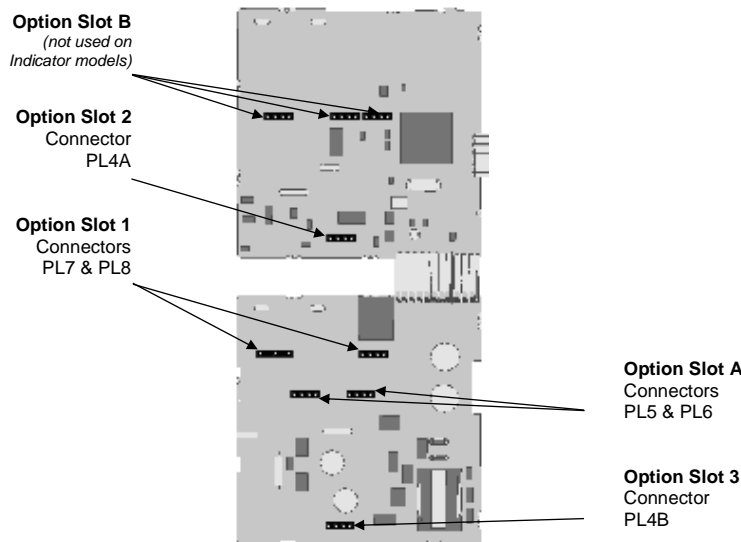


Panel-Mounting


The mounting panel must be rigid, and may be up to 6.0mm (0.25inch) thick. Cut-out sizes are:

Cut-Out Dim A 1/16 Din = 45mm, 1/8 Din = 92mm
Cut-Out Dim B 1/16 & 1/8 Din = 45mm

For *n* multiple instruments mounted side-by-side, cut-out A is 48*n*-4mm (1/16 Din) or 96*n*-4mm (1/8 Din)

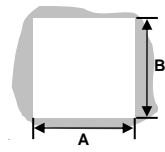

Tolerance +0.5, -0.0mm
1. Insert instrument into the panel cut-out.

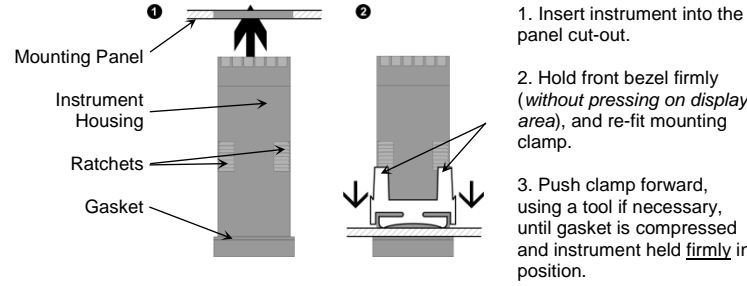



CAUTION: For an effective IP66 & NEMA 4X seal against dust and moisture, ensure gasket is well compressed against the panel, with the 4 tongues located in the same ratchet slot.

Rear Terminal Wiring

USE COPPER CONDUCTORS (EXCEPT FOR T/C INPUT). CABLE RATING 80°C MIN
Single Strand wire gauge: Max 1.2mm (18SWG)

The diagrams below show all possible option combinations. The actual connections required depends on the exact model and options fitted.

CAUTION: Check information label on housing for correct operating voltage before connecting supply to Power Input
Fuse: 100 – 240V ac – 1Amp anti-surge
24/48V ac/dc – 315mA anti-surge

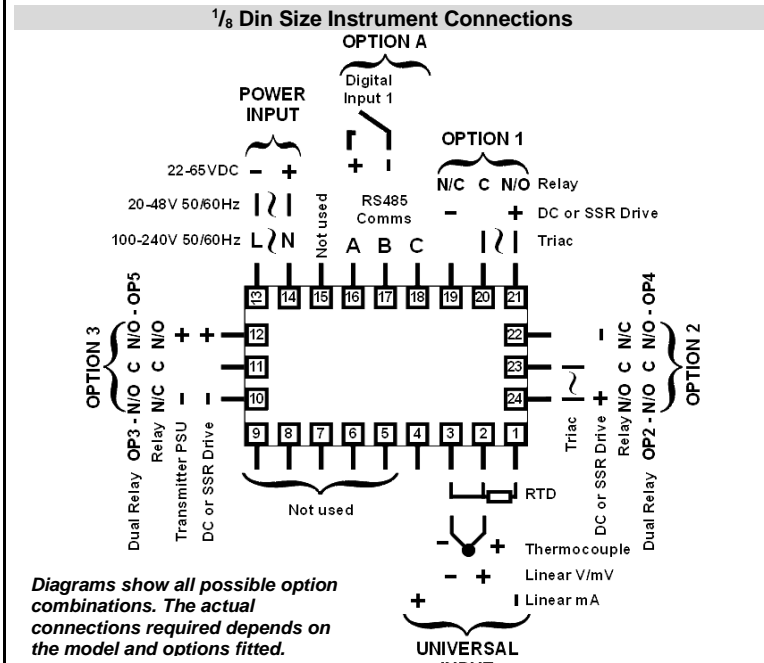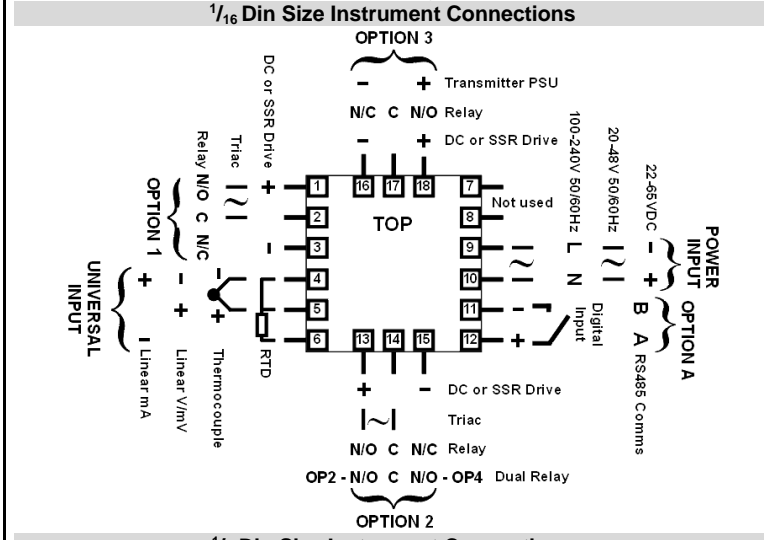

Diagrams show all possible option combinations. The actual connections required depends on the model and options fitted.

Supplementary Installation & Safety Information

Designed to offer a minimum of Basic Insulation only & compliance shall not be impaired when fitted to the final installation. Ensure that supplementary insulation suitable for Installation Category II is achieved when fully installed

To avoid possible hazards, accessible conductive parts of the installation must be protectively earthed appropriate for Class 1 Equipment. Output wiring should be within a Protectively Earthed cabinet & sensor sheaths should be bonded to protective if accessible. Live parts should not be accessible without the use of a tool. A disconnecting device should disconnect both LINE & NEUTRAL conductors simultaneously. The disconnecting device must be easily accessible.
WARNING: This product can expose you to chemicals including arsenic, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov

2. SELECT MODE - SLct

Note: At first power-up **Conf** is displayed, see section 5 of this manual. Access to other menus is denied until configuration mode is complete. Select mode is used to access the configuration and operation menu functions. It can be accessed at any time by holding down **ESC** and pressing **DEL**. The **SLct** legend is shown for 1 second, followed by the legend for the current mode. Press **UP** or **DOWN** to choose the required mode, then press **ENTER** to enter. An unlock code is required to prevent unauthorised entry to Configuration, & Setup modes. Press **UP** or **DOWN** to enter the unlock code, then press **ENTER** to proceed.

| Mode | Legend for 1 sec followed by | Set Value | Description | Default Unlock Codes | Units Display (1/8 Din Only) |
|---------------|------------------------------|-----------|---------------------------------|----------------------|------------------------------|
| Operator | OPtr | | Normal operation | None | |
| Set Up | SEtP | | Tailor settings for application | 10 | 5 |
| Configuration | ConF | | Configure instrument for use | 20 | |
| Product Info | inFo | | Instrument information | None | |

Note: Automatic return to Operator Mode after 2 minutes without key activity.

3. CONFIGURATION MODE - ConF

First select Configuration mode from Select mode (refer to section 2). Press **ESC** to scroll through the parameters. While this key is pressed, and up to 1 second after, the parameter legend is shown, followed by the current value.

Press **UP** or **DOWN** to set the required value. Press **ESC** to display **YES?**, press **UP** to accept the change, otherwise parameter will revert to previous value. To exit from Configuration mode, hold down **ESC** and press **DEL** to return to Select mode.

Note: Parameters seen depend on model/configuration. Refer to user guide (available from your supplier) for details. Parameters marked * repeat in Setup Mode.

| Parameter | Legend for 1 sec followed by | Set Value | Adjustment Range & Description | Default Value | Units Display (1/8 Din Only) |
|------------------|------------------------------|-----------|--|---------------|------------------------------|
| Input Range/Type | inPt | | See following table for possible codes | JC | r |
| Code | Input Type & Range | Code | Input Type & Range | Code | Input Type & Range |
| bC | B: 100 - 1824 °C | LC | L: 0.0 - 537.7 °C | P24F | PtRh20% vs 40%: 32 - 3362 °F |
| bF | B: 211 - 3315 °F | LF | L: 32.0 - 999.9 °F | | |
| cC | C: 0 - 2320 °C | NC | N: 0 - 1399 °C | PtC | Pt100: -199 - 800 °C |
| cF | C: 32 - 4208 °F | NF | N: 32 - 2551 °F | PtF | Pt100: -328 - 1472 °F |
| JC | J: -200 - 1200 °C | rC | R: 0 - 1759 °C | PtC | Pt100: -128.8 - 537.7 °C |
| JF | J: -328 - 2192 °F | rF | R: 32 - 3198 °F | PtF | Pt100: -199.9 - 999.9 °F |
| Jc | J: -128.8 - 537.7 °C | Sc | S: 0 - 1762 °C | 0.20 | 0 - 20 mA DC |
| Jf | J: -199.9 - 999.9 °F | Sf | S: 32 - 3204 °F | 4.20 | 4 - 20 mA DC |
| Kc | K: -240 - 1373 °C | tC | T: -240 - 400 °C | 0.50 | 0 - 50 mV DC |
| Kf | K: -400 - 2503 °F | tF | T: -400 - 752 °F | 10.50 | 10 - 50 mV DC |
| Kc | K: -128.8 - 537.7 °C | tC | T: -128.8 - 400.0 °C | 0.5 | 0 - 5 V DC |
| Kf | K: -199.9 - 999.9 °F | tF | T: -199.9 - 752.0 °F | 1.5 | 1 - 5 V DC |
| Lc | L: 0 - 762 °C | P24C | PtRh20% vs. 40%: 0 - 1850 °C | 0.10 | 0 - 10 V DC |
| Lf | L: 32 - 1403 °F | 2.10 | 2 - 10 V DC | | |

Note: Decimal point shown in table indicates temperature resolution of 0.1°

| Parameter | Legend for 1 sec followed by | Set Value | Adjustment Range & Description | Default Value | Units Display (1/8 Din Only) |
|--|------------------------------|-----------|--|------------------|------------------------------|
| Scale Range Upper Limit | rUL | | Scale Range Lower Limit +100 to Range Maximum | Max (Lin = 1000) | u |
| Scale Range Lower Limit | rLL | | Range Minimum to Scale Range Upper Limit -100 | Min (Lin = 0) | L |
| Decimal point position | dPoS | | 0=XXXX, 1=XXX.X, (non-temperature ranges only) 2=XX.XX, 3=X.XXX | 1 | P |
| Linear Range Engineering Units Display | L inU | | None (Blank), °C or °F 1/8 Din units only where linear inputs represent temperature | nonE | °C °F |
| Multi-Point Scaling | rMPS | | EnAb d iSA | d iSA | S |
| Alarm 1Type | ALR1 | | P_H i P_Lo nonE | P_H i | 1 |
| High Alarm 1* | PhA1 | | Alarm 1 value, adjustable within scaled range, in display units | Max | 1 (Alm1 only = R) |
| Low Alarm 1* | PLA1 | | | Min | |
| Alarm 1 Hysteresis* | AHY1 | | 1 LSD to full span in display units on safe side of alarm | 1 | - |
| Alarm 2Type | ALR2 | | | nonE | 2 |
| High Alarm 2* | PhA2 | | Options as for alarm 1 | Max | 2 |
| Low Alarm 2* | PLR2 | | | Min | |

| Parameter | Legend for 1 sec followed by | Set Value | Adjustment Range & Description | Default Value | Units Display (1/8 Din Only) | |
|-------------------------------|------------------------------|-----------|--|---------------|---|---|
| AI 2 Hysteresis* | AHY2 | | | 1 | - | |
| Alarm 3Type | ALR3 | | | nonE | 3 | |
| High Alarm 3* | PhA3 | | Options as for alarm 1 | Max | 3 | |
| Low Alarm 3* | PLA3 | | | Min | | |
| AI 3 Hysteresis* | AHY3 | | | 1 | - | |
| Alarm 4Type | ALR4 | | Options as for alarm 1 | nonE | 4 | |
| High Alarm 4* | PhA4 | | | Max | 4 | |
| Low Alarm 4* | PLA4 | | Options as for alarm 1 | Min | | |
| AI 4 Hysteresis* | AHY4 | | | 1 | - | |
| Alarm 5 Type | ALR5 | | | nonE | 5 | |
| High Alarm 5* | PhA5 | | Options as for alarm 1 | Max | 5 | |
| Low Alarm 5* | PLA5 | | | Min | | |
| AI 5 Hysteresis* | AHY5 | | | 1 | - | |
| Output 1 Usage | USE1 | | A Ind Alarm 1, direct, non-latching A Inr Alarm 1, reverse, non-latching A lLd Alarm 1, direct, latching A lLr Alarm 1, reverse, latching A2nd Alarm 2, direct, non-latching A2nr Alarm 2, reverse, non-latching A2Ld Alarm 2, direct, latching A2Lr Alarm 2, reverse, latching A3nd Alarm 3, direct, non-latching A3nr Alarm 3, reverse, non-latching A3Ld Alarm 3, direct, latching A3Lr Alarm 3, reverse, latching A4nd Alarm 4, direct, non-latching A4nr Alarm 4, reverse, non-latching A4Ld Alarm 4, direct, latching A4Lr Alarm 4, reverse, latching A5nd Alarm 5, direct, non-latching A5nr Alarm 5, reverse, non-latching A5Ld Alarm 5, direct, latching A5Lr Alarm 5, reverse, latching 0 l2d Logical Alarm 1 OR 2, direct 0 l2r Logical Alarm 1 OR 2, reverse 0 l3d Logical Alarm 1 OR 3, direct 0 l3r Logical Alarm 1 OR 3, reverse 023d Logical Alarm 2 OR 3, direct 023r Logical Alarm 2 OR 3, reverse AnYd Any active alarm, direct AnYr Any active alarm, reverse rEtP Retransmit PV Output dc 10 0 to 10VDC (adjustable) transmitter power supply* | | rEtP for linear outputs, A Ind for others | 1 |
| Output 1 PV Retransmit Type | tYP1 | | 0.5 0 to 5 V DC output 0.10 0 to 10 V DC output 2.10 2 to 10 V DC output 0.20 0 to 20 mA DC output 4.20 4 to 20 mA DC output | | 0.10 | |
| Retransmit OP 1 Scale maximum | ro1H | | Display value between, -1999 & 9999 at which Output 1 will be at maximum | | H | |
| Retransmit OP 1 Scale minimum | ro1L | | Display value between, -1999 & 9999 at which Output 1 will be at minimum | | L | |
| TxPSU 1 level | PSU1 | | Output 1 Power Supply (0 to 10VDC)* | 10.0 | 1 | |
| Output 2 Usage | USE2 | | As for Output 1 Usage | A2nd | 2 | |
| Output 2 PV Retransmit Type | tYP2 | | As for Output 1 PV Retransmit Type | | 2 | |
| Retransmit OP2 Scale maximum | ro2H | | As for Retransmit Output 1 Scale Maximum | | H | |
| Retransmit OP2 Scale minimum | ro2L | | As for Retransmit Output 1 Scale Minimum | | L | |
| TxPSU 2 level | PSU2 | | Output 2 Power Supply (0 to 10VDC)* | 10.0 | 2 | |
| Output 3 Usage | USE3 | | As for Output 1 Usage | A3nd | 3 | |
| Output 3 PV Retransmit Type | tYP3 | | As for Output 1 PV Retransmit Type | | 3 | |
| Retransmit OP3 Scale maximum | ro3H | | As for Retransmit Output 1 Scale Maximum | | H | |
| Retransmit OP3 Scale minimum | ro3L | | As for Retransmit Output 1 Scale Minimum | | L | |
| TxPSU 3 level | PSU3 | | Output 3 Power Supply (0 to 10VDC)* | 10.0 | 3 | |
| Output 4 Usage | USE4 | | Alarm output options as for Output 1 Usage | A4nd | 4 | |
| Output 5 Usage | USE5 | | | A5nd | 5 | |
| Display Strategy | d iSP | | 0, 1, 2, 3, 4 or 6 (refer to section 6) | 0 | d | |
| Display Colour | CLor | | rEd Permanent Red Grn Permanent Green r-r Red to Green on any alarm G-r Green to Red on any alarm | | c | |

